
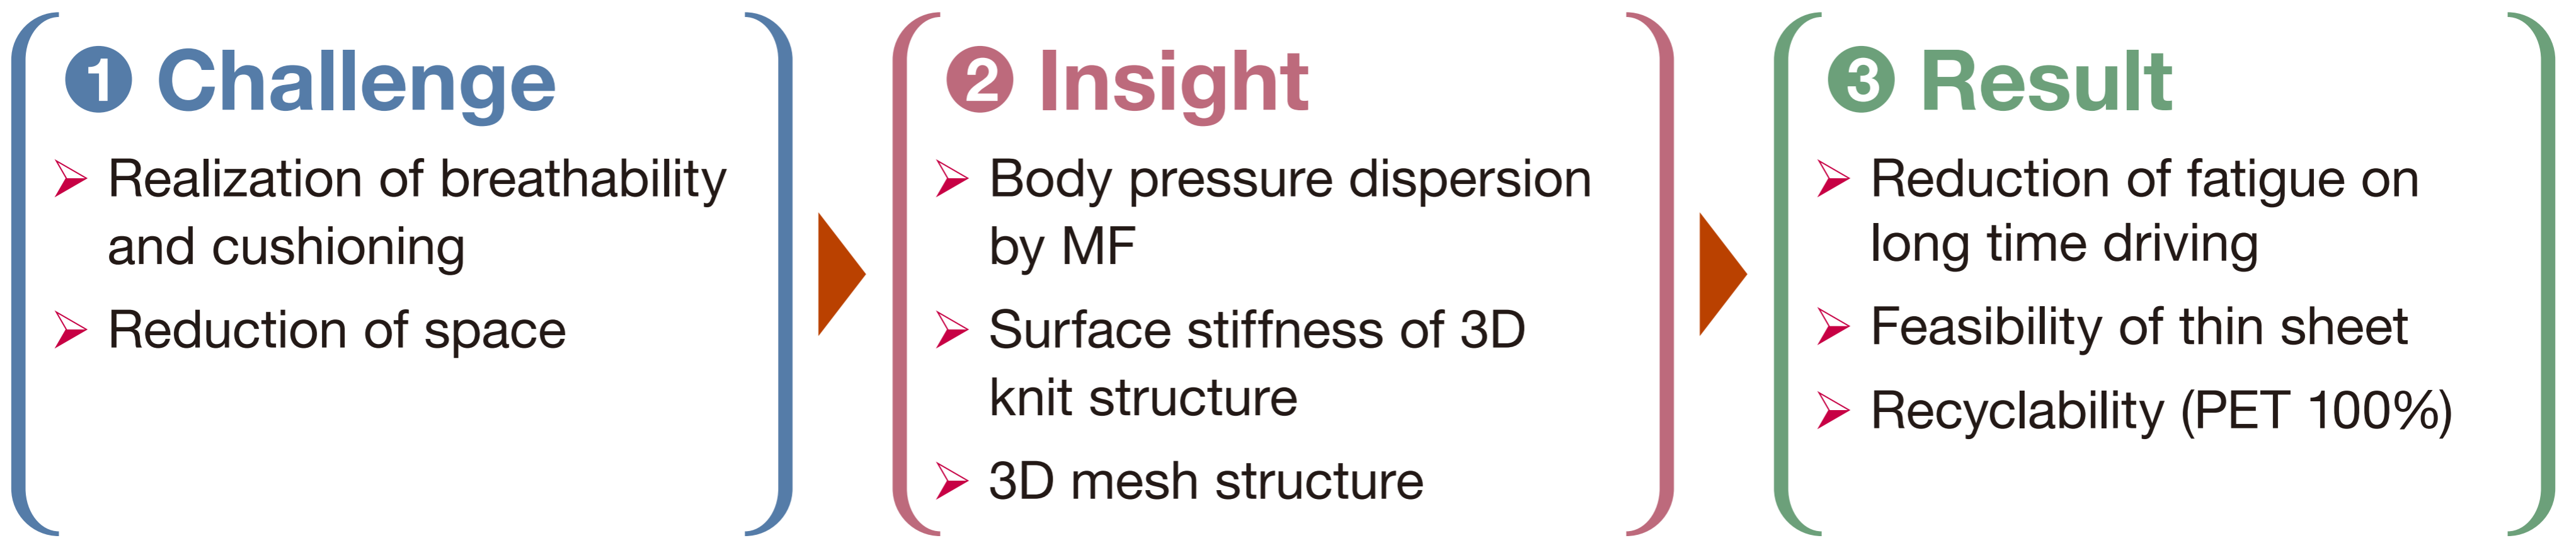


Realization of comfortable car seat

Car seat using 3D knit fabric "Cubit".

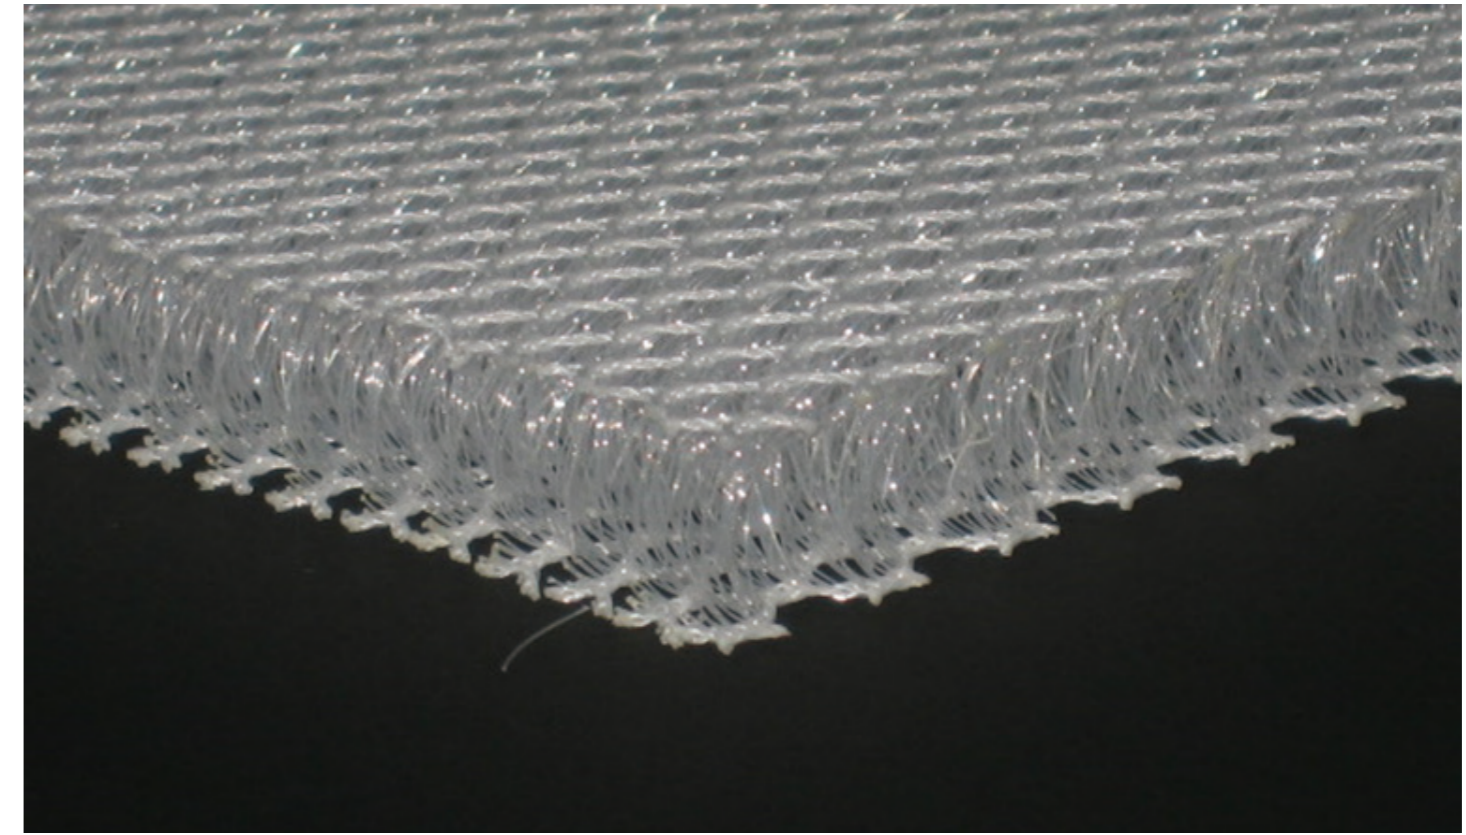


Product Features

1 POINT.1 Good Cushioning

The knit fabrics realize good cushioning in a state pulled with a frame because knit fabric makes moderate elasticity and extensibility of vertical and horizontal.

2 POINT.2 Pressure dispersion in thickness direction

The knit structure supports weight on a large area that take advantage of recoverability of monofilament yarn connecting front and middle yarn.

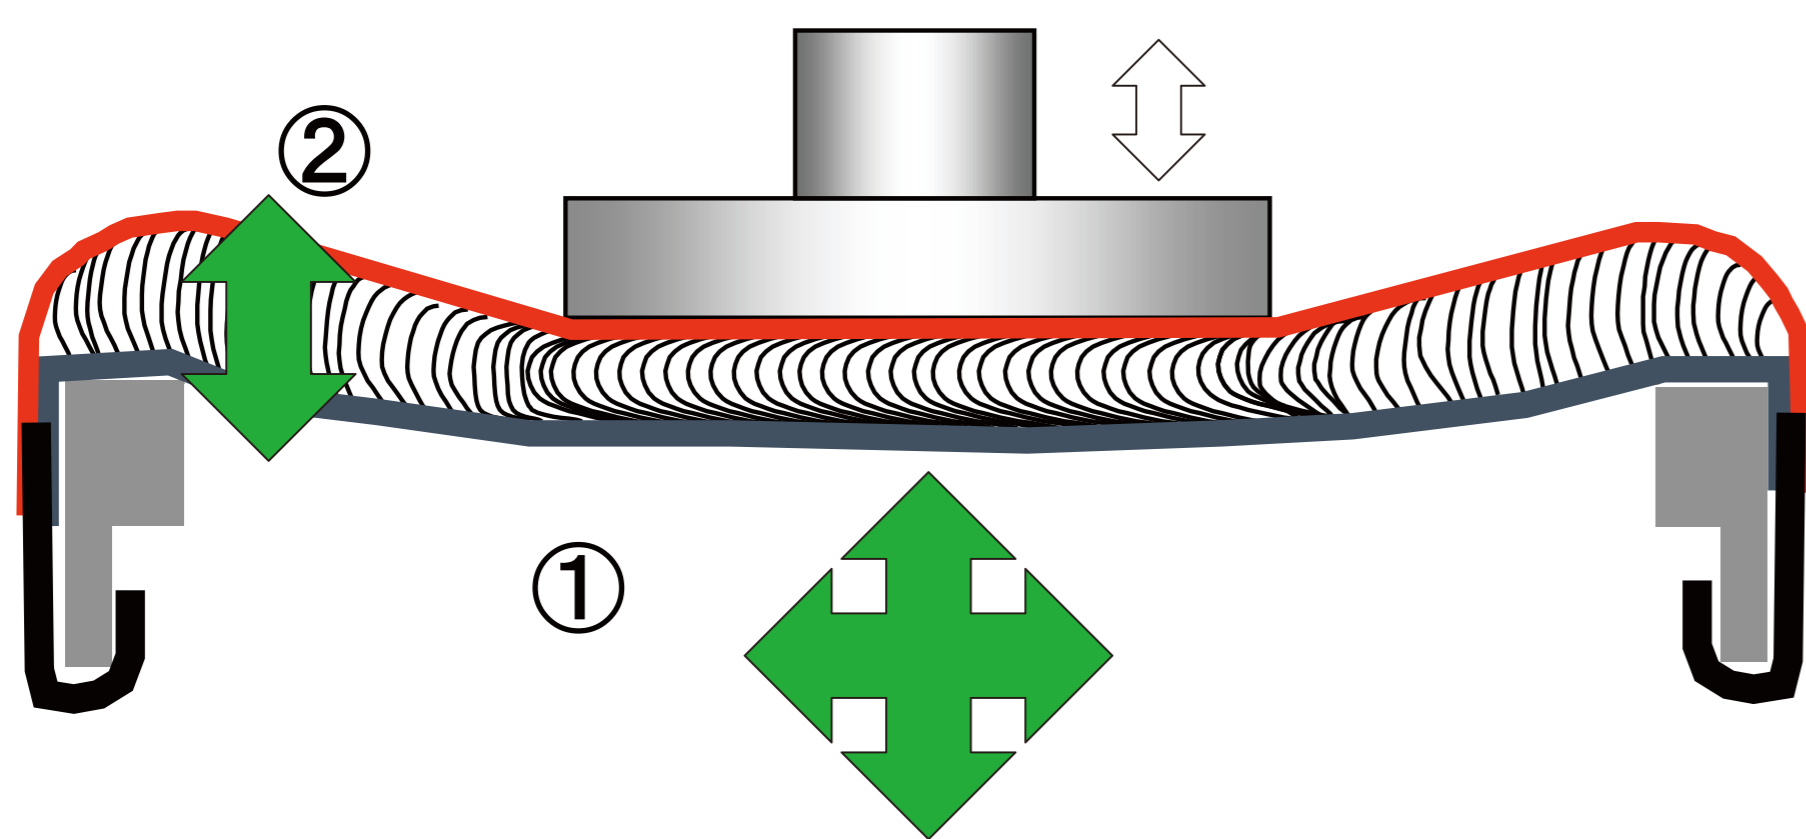

Durability (Comparison of PTT with other polyesters)

Number of compressions	Connecting thread		
	PTT	PET	PBT
Blank (0 times compression)			
250,000 compressions			
State	Almost unchanged	Crumbling	Crumbling

PTT is a flexible, spring-like, hard-to-set material.

State of Progress

Early Stages of Development



Development Completed